


 **X-5 / XC-5**  
**LED STROBE**



## X-5 / XC-5 LED Strobe dimensions

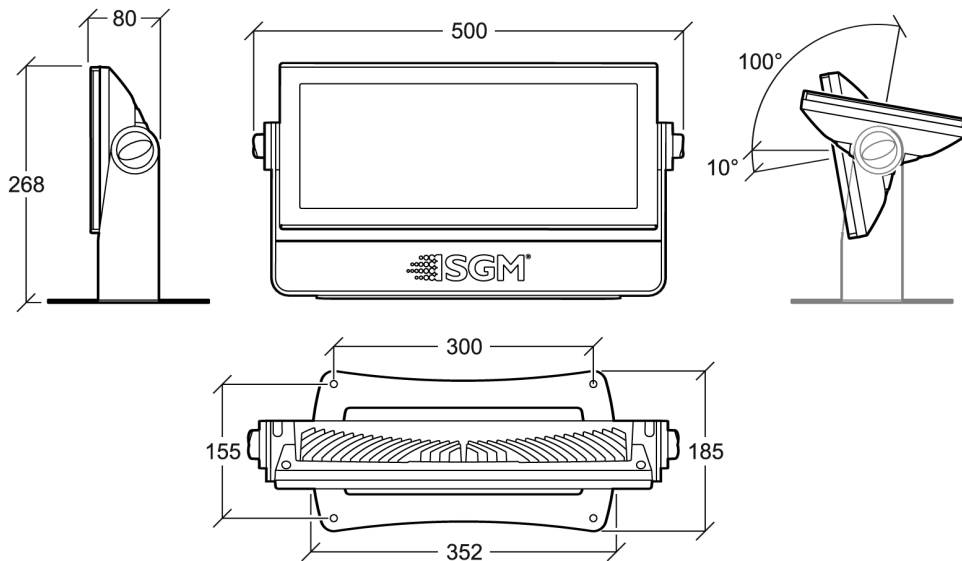

# **X-5 / XC-5 LED STROBE USER MANUAL REV. 1**

© 2010-2012 SGM™. Information subject to change without notice. SGM and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. The SGM logo, the SGM name and all other trademarks in this document pertaining to services or products by SGM or its affiliates and subsidiaries are trademarks owned or licensed by SGM or its affiliates or subsidiaries.

**X-5 / XC-5 LED Strobe uk**

# Contents

Safety Information.....	5
Preparation for Use.....	7
Controller Operation.....	9
Setup.....	10
DMX Control Summary.....	12
Service.....	14
DMX Protocols.....	15
Specifications.....	20
Users notes.....	22

## Safety Information



### ***WARNING!***

*This product is for professional use only! It is not for household use.*

Strobe lights are known to trigger epileptic seizures in persons who are photosensitive.



*To guard against electric shock.*

- Do not open: there are no user-serviceable parts inside.
- Always ground (earth  $\perp$ ) the fixture electrically.
- Use only a source of AC power that compiles with local building and electrical codes and has both overload and earth leakage protection.
- Do not expose the fixture to rain or moisture.



*To guard against UV radiation, burn, and fire.*

- Do not stare directly into the light.
- Never attempt to bypass the fuse. Always replace defective fuses with ones of the specified type and rating.
- Verify that the power feed cable is rated for the current draw of all connected fixtures.
- Keep all combustible materials (for example fabric, wood, paper) at least 0.5 meters (20 inches) away from the fixture. Keep flammable materials well away from the fixture.
- Provide a minimum clearance of 0.1 meters (4 inches) around air vents.
- Do not modify the fixture or install other than genuine SGM parts.
- Do not operate the fixture if the ambient air temperature (Ta) exceeds 40° C (104° F).



*To guard against epileptic seizure..*

- Do not operate the fixture near stairways.
- Provide advance notice that strobe lighting is in use.
- Avoid extended periods of continuous flashing, particularly at frequencies of 10 to 20 flashes per second.

# Preparation for Use

## ***Unpacking***

- Strobe Light Fixture
- User manual
- Mains power cable
- Foot – black aluminium plate

The packing material protects the fixture during shipment, please retain for future transportation of the fixture.

## ***AC Power Connection***

The auto-ranging power supply automatically adjusts to AC power from 200-240 volts nominal at 50/60 Hz.

The current required by the X-5/XC-5 is 4 amps. To avoid overload, allow one 4 amp branch circuit per fixture to operate the X-5/XC-5 model at full power.

Use 2.5 mm<sup>2</sup> (13 AWG) or larger power feed cables and keep runs as short as possible.

## ***To rig the fixture***



*Always use a secure means of secondary fixing such as a safety wire*

### **Before installing, verify that;**

- the attachment hardware is in good condition and designed to carry at least 10 times the fixture's weight,
- the structure can support at least 10 times the weight of all installed fixtures, clamps, cables, auxiliary equipment, etc.;
- the clearance around the air vents is at least 0.1 meters (4 in.).
- Loosen the mounting bracket and adjust the fixture to the desired angle.
- Connect and arrange the power and data cables.



# Controller Operation

This section describes how to operate the X-5/XC-5 with a DMX controller.

## Data Connection

The X-5/XC-5 provided 5-pin XLR sockets for data connection. The pin-out on all sockets is pin 1 to shield, pin 2 to cold (-), and pin 3 to hot (+). There is no connection to pins 4 and 5. The sockets are wired in parallel: both inputs connect to both outputs. *For reliable data transmission use one input and one output!*

### To connect the data link



1. Connect the DMX data input from the controller to the fixture 5-pin input (male) socket.
2. Connect up to 31 additional fixtures output-to-input.
3. Insert a termination plug in the output of the last fixture on the link.

### Data Connection Tips

- Use shielded twisted-pair cable designed for DMX devices: standard microphone cable cannot transmit control data reliably over long distance. 24 AWG cable is suitable for distances up to 300 meters (1000 ft.). Use heavier gauge cable and/or a DMX splitter/amp for longer distances.
- Do not overload the link. Up to 32 devices may be connected on a serial link.
- Terminate the link by installing a termination plug in the output socket of the last fixture. The termination plug, which is a male XLR plug with a 120 ohm, 0.25 watt resistor soldered between pins 2 and 3, absorb the control signal so it does not reflect and cause interference.

# Setup

The fixture uses an interactive display for setting up DMX address and operation mode. Use the five buttons next to the display to navigate the setup structure (*Fig. 1*).

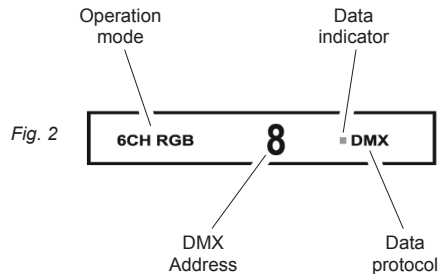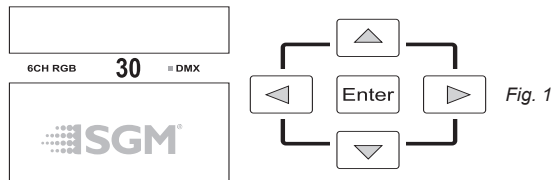

When the product is switched on, the fixture will be at its default setting showing the ROOT menu (*Fig. 2*).

The root menu show a summary of the setup information, selected DMX address, operation mode, data indicator and protocol.

## Setting DMX address

In the root menu the user can set the DMX address directly by using the arrow UP and DOWN (*Fig. 3*).



*Fig. 3*

The fixture has a handy feature which displays the DMX value for the next fixture (assuming you are connecting more than one fixture)

The selected address is stored by pushing ENTER storing the DMX address.

## Setting Mode

To enter the menu press ENTER, and then use the arrow up and down to select sub menus. Select the desired MODE and then press ENTER to store it.



Please refer to the chapter "DMX PROTOCOLS" to get further details of available DMX modes.

# DMX Control Summary

For specific command values, see “DMX protocols” on page 15.

## **Intensity**

Flash intensity can be set from minimum (blackout) to maximum on channel 1 in the 3- and 4-channel DMX modes. Intensity is maximum in 1-channel DMX mode.

## **Duration**

Flash duration can be set from 0 to 650 ms on 50 Hz power supplies, or 0 to 530 ms on 60 Hz power supplies, on channel 2 in the 3- and 4-channel DMX modes. Flash duration is fixed in 1-channel DMX mode.

## **Rate**

Flash rate can be set from 0 flashes per second to 25 flashes per second on 50 Hz power supplies or from 0 to 30 flashes per second on 60 Hz power supplies, on channel 3 in the 3- and 4-channel DMX modes. Flash rate is also controllable in 1-channel DMX mode.

## **Programmed Effects**

Six programmed effects are available on channel 4 in the 4-channel DMX mode only. The effects may be altered using the intensity, duration, and rate controls.

- Ramp up: Light gradually increases in intensity, then blacks out.
- Ramp down: Light flashes to full intensity, then gradually fades.
- Ramp up-down: Light gradually increases and decreases.
- Random flash: Light flashes randomly with variable rate and intensity. Multiple units flash independently of each other.
- Lightning: The flashes simulate lightning. Duration is not adjustable.

### **Blinder Effect**

The blinder effect, in which the light remains on for an extended period, is available in all DMX modes. In the 3- and 4-channel modes, the effect is achieved

The combination of flash duration and rate prevents pauses between flashes. For example, the blinder effect can be achieved with a flash duration of 0.25 seconds (250 ms) and a flash rate of 4 flashes per second, or a flash duration of 0.05 seconds (50 ms) and a flash rate of 20 flashes per second.

In 3- and 4-channel DMX mode, the intensity of the blinder effect is controllable on channel 1. Lamp power is electronically regulated to prevent the lamp from overheating. The intensity falls as power is reduced.

### **Single Flash**

To trigger single flashes, start with the intensity and flash rate at 0 and then set intensity on channel 1. When the value of channel 1 changes, the light will flash once with the programmed intensity, duration, and effect.

## Service



*Disconnect the product from the main power for at least a minute before servicing.*

### Fuse Replacement

The X-5/XC-5 uses a time-delay fuse for protection against current overload. The fuse is located inside the base on the main PCB of the fixture – next to the low voltage power supply. Fuses must be replaced by a certified professional.

Never bypass the fuse or replace it with one of another size or rating.

### Firmware Updates

If you suspect that the firmware installed on your X-5/XC-5 becomes corrupted, please go to SGM website for further information on how to update firmware or contact your nearest dealer for assistance.

# DMX Protocols

## 1 Channel MODE

Channel	Value	Percent	Function
1	0 - 5 6 - 249 250 - 255	0 - 1% 2 - 97% 98 - 100%	Blackout Flash rate, slow to fast Continuous blinder effect

## 3 Channel MODE

Channel	Value	Percent	Function
1	0 - 5 6 - 255	0 - 1% 2 - 100%	<b>Flash intensity</b> Blackout Min to max intensity
2	0 - 255	0 - 100%	<b>Flash duration</b> 0 - 650 ms @ 50 Hz AC 0 - 530 ms @ 60 Hz AC
3	0 - 5 6 - 255	0 - 1% 2 - 100%	<b>Flash rate</b> No flash (Trig single flash using Ch1) 0.5 - 25 Hz @ 50 Hz AC 0.6 - 30 Hz @ 60 Hz AC

#### 4 Channel MODE

Channel	Value	Percent	Function
1	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Flash intensity</b> Blackout Min to max intensity
2	0 – 255	0 – 100%	<b>Flash duration</b> 0 – 650 ms @ 50 Hz AC 0 – 530 ms @ 60 Hz AC
3	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Flash rate</b> No flash (Trig single flash using Ch1) 0.5 – 25 Hz @ 50 Hz AC 0.6 – 30 Hz @ 60 Hz AC
4	0 – 5 6 – 42 43 – 85 86 – 128 129 – 171 172 – 214 215 – 255	0 – 1% 2 – 16% 17 – 33% 34 – 50% 51 – 67% 68 – 83% 84 – 100%	<b>Special effect</b> No effect Ramp up Ramp down Ramp up-down Random Lightning Spikes



## 6 Channel MODE

Channel	Value	Percent	Function
1	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Master flash intensity</b> Blackout Min to max intensity
2	0 – 255	0 – 1% 2 – 100%	<b>Red/Seg1 intensity</b> Intensity of RED (XC-5) or SEGMENT 1 (X-5)
3	0 – 255	0 – 1% 2 – 100%	<b>Green/Seg2 intensity</b> Intensity of GREEN (XC-5) or SEGMENT 2 (X-5)
4	0 – 255	0 – 1% 2 – 100%	<b>Blue/Seg3 intensity</b> Intensity of BLUE (XC-5) or SEGMENT 3 (X-5)
5	0 – 255	0 – 1% 2 – 100%	<b>Flash duration</b> 0 – 650 ms @ 50 Hz AC 0 – 530 ms @ 60 Hz AC
6	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Flash rate</b> No flash (Trig single flash using Ch1) 0.5 – 25 Hz @ 50 Hz AC 0.6 – 30 Hz @ 60 Hz AC

## 7 Channel MODE

Channel	Value	Percent	Function
1	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Master flash intensity</b> Blackout Min to max intensity
2	0 – 255	0 – 1% 2 – 100%	<b>Red/Seg1 intensity</b> Intensity of RED (XC-5) or SEGMENT 1 (X-5)
3	0 – 255	0 – 1% 2 – 100%	<b>Green/Seg2 intensity</b> Intensity of GREEN (XC-5) or SEGMENT 2 (X-5)
4	0 – 255	0 – 1% 2 – 100%	<b>Blue/Seg3 intensity</b> Intensity of BLUE (XC-5) or SEGMENT 3 (X-5)
5	0 – 255	0 – 1% 2 – 100%	<b>Flash duration</b> 0 – 650 ms @ 50 Hz AC 0 – 530 ms @ 60 Hz AC
6	0 – 5 6 – 255	0 – 1% 2 – 100%	<b>Flash rate</b> No flash (Trig single flash using Ch1) 0.5 – 25 Hz @ 50 Hz AC 0.6 – 30 Hz @ 60 Hz AC

Channel	Value	Percent	Function
7	0 – 5 6 – 42 43 – 85 86 – 128 129 – 171 172 – 214 215 – 255	0 – 1% 2 – 16% 17 – 33% 34 – 50% 51 – 67% 68 – 83% 84 – 100%	<b>Special effect</b> No effect Ramp up Ramp down Ramp up-down Random Lightning Spikes

# Specifications *X-5 (Part #: 80090001) XC-5 (Part #: 80090002)*

## PHYSICAL

Size (without bracket).....268 x 500 x 120 mm  
Weight.....5.8 kg

## THERMAL

Maximum ambient temperature.....40° C (104° F)

## CONTROL AND PROGRAMMING

USITT DMX512-A control.....1, 3, 4, 6 and 7 channel modes

## AC POWER

AC input.....Powercon  
Approved AC power (EU).....200 - 240 V nominal, 50/60 Hz  
Average current consumption.....4 A

## FUSES

Primary fuse.....6.3 AT / 250 V

## **CONSTRUCTION**

Housing.....Aluminium  
Finish.....Electrostatic powder coating

## **INSTALLATION**

Minimum clearance around fan and air vents.....0.1 m (4 in)

***Specifications subject to change without notice***

## Users notes





SGM A/S · Soeren Frichs Vej 51-53 · DK 8230 Aabyhoej · Denmark  
Tel +45 70 20 74 00 · [info@sgmlight.com](mailto:info@sgmlight.com) · [www.sgmlight.com](http://www.sgmlight.com)